
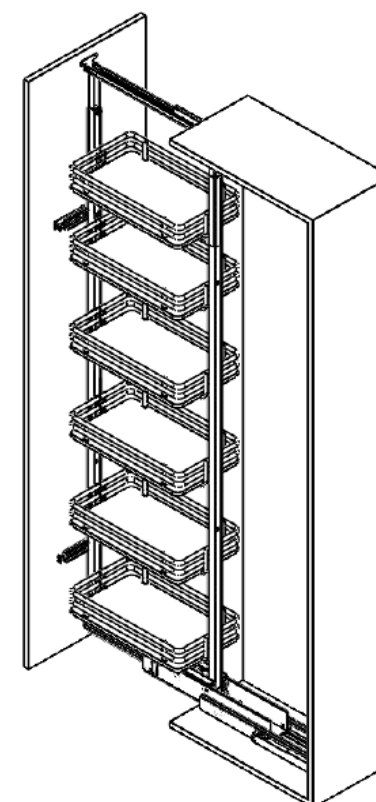


Height:

1850-2170mm	6	baskets
1550-1870mm	5	baskets
1250-1570mm	4	baskets


Basket Size:

W=Cabinet Size-50mm
D=426mm
H=80mm

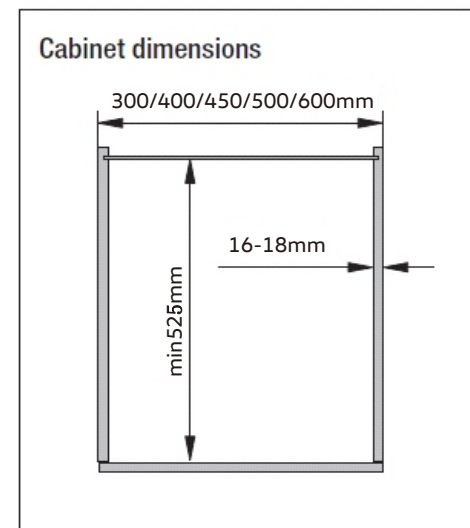


Basket styles:


Wire

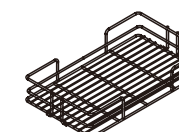


Flat



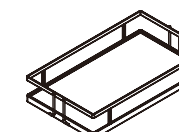


Oval



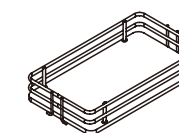


Panel


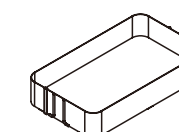


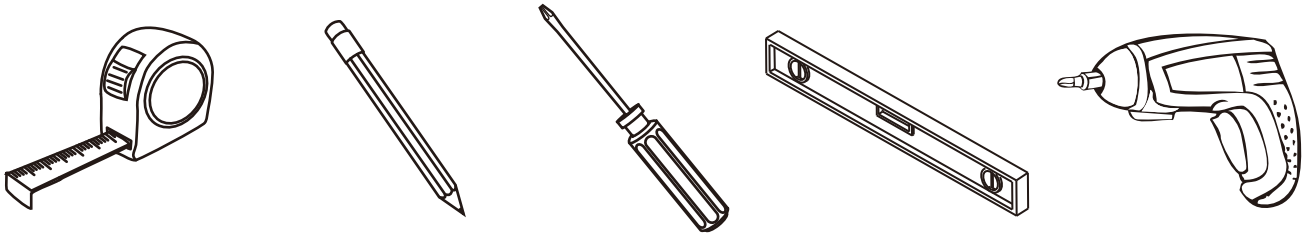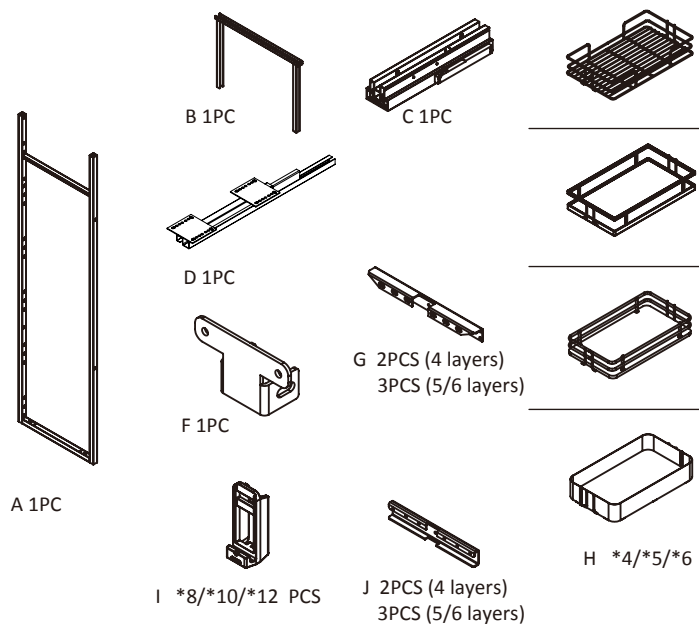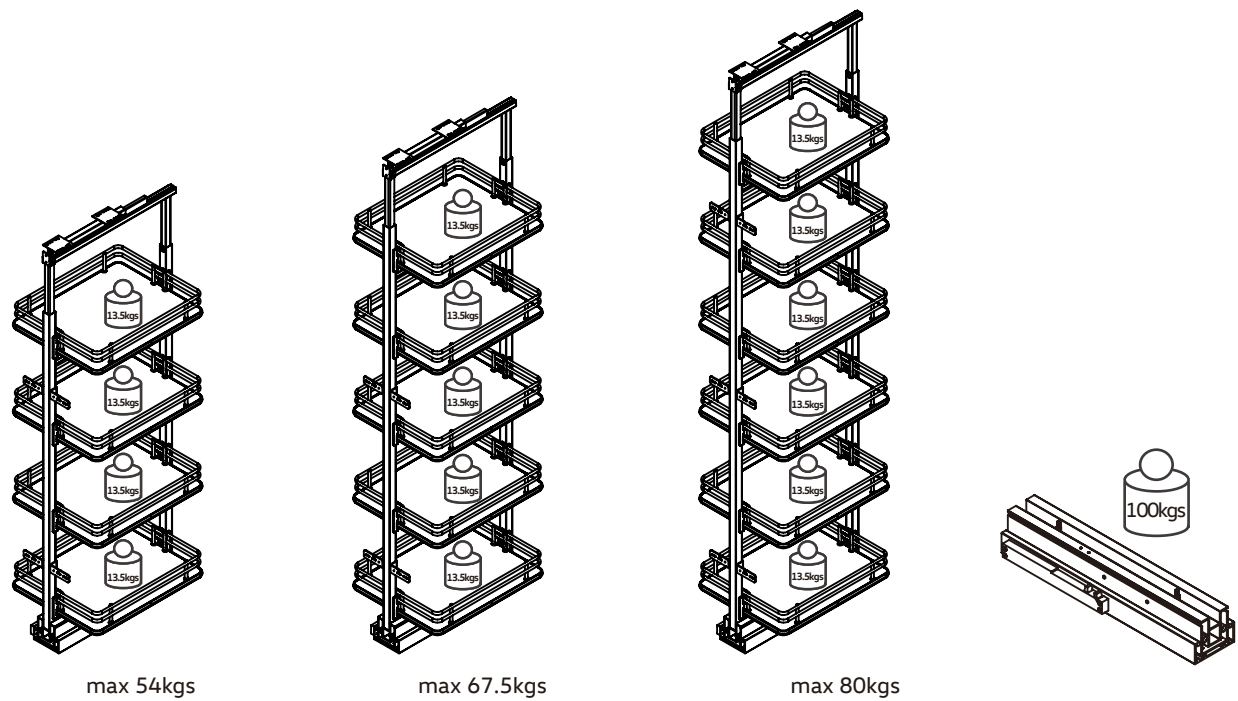



1

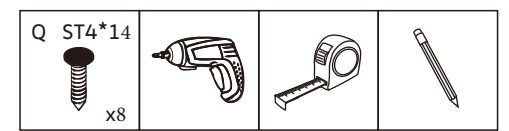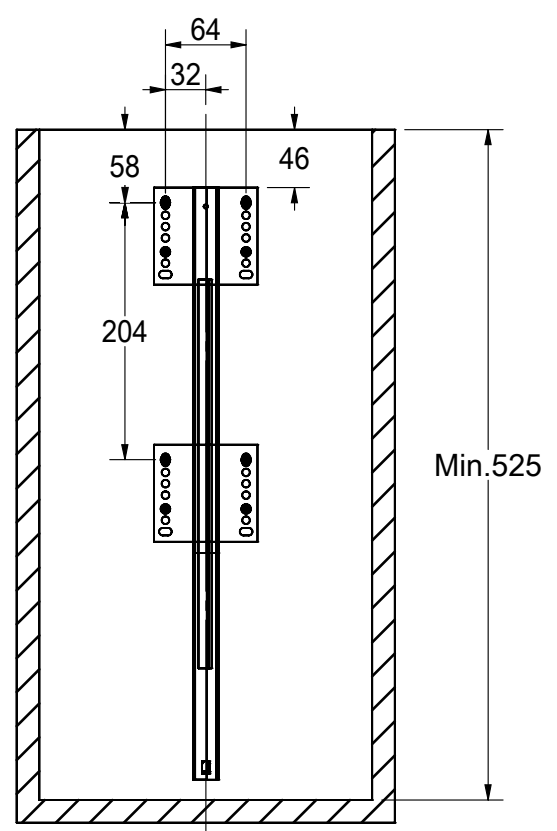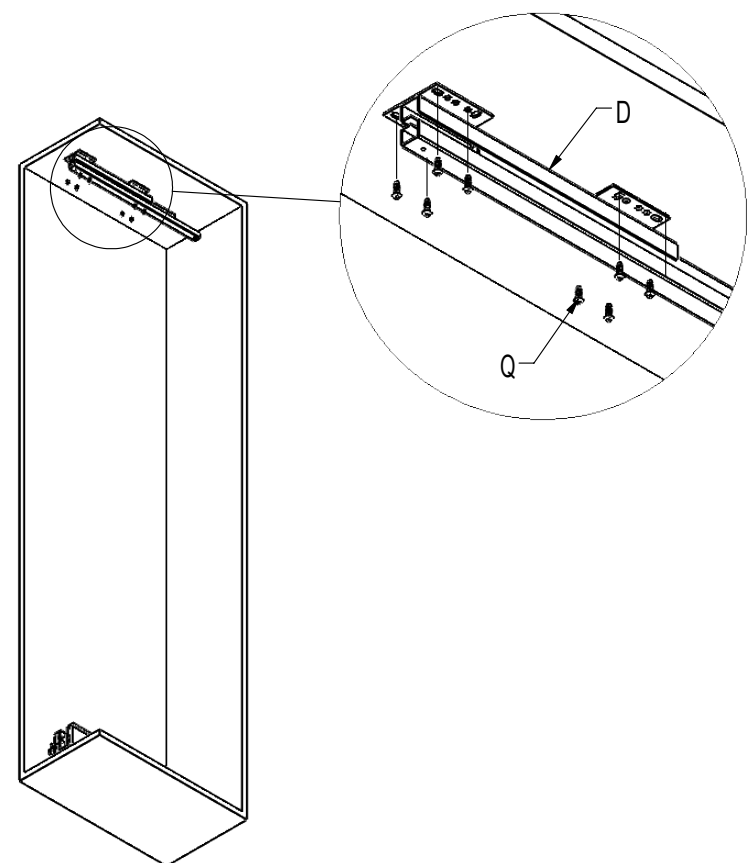



2

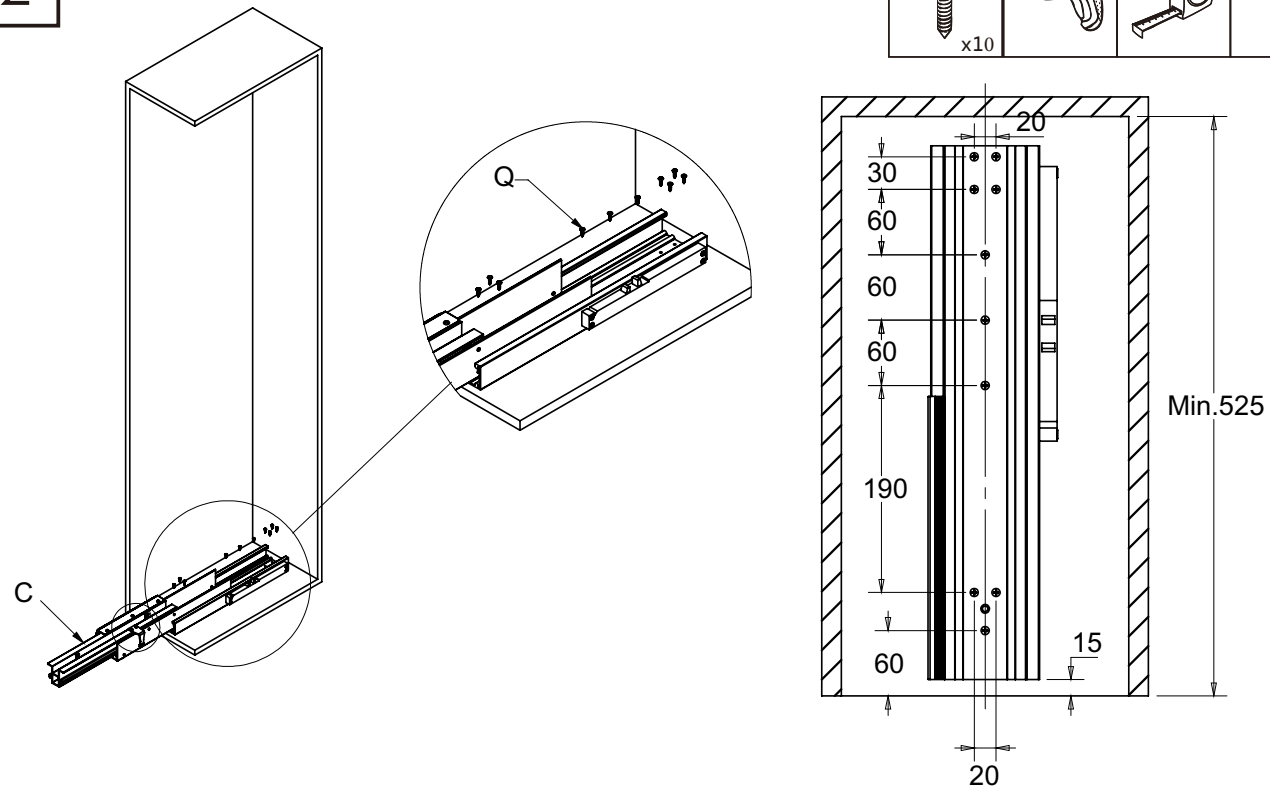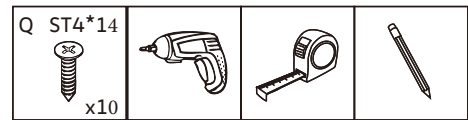



3

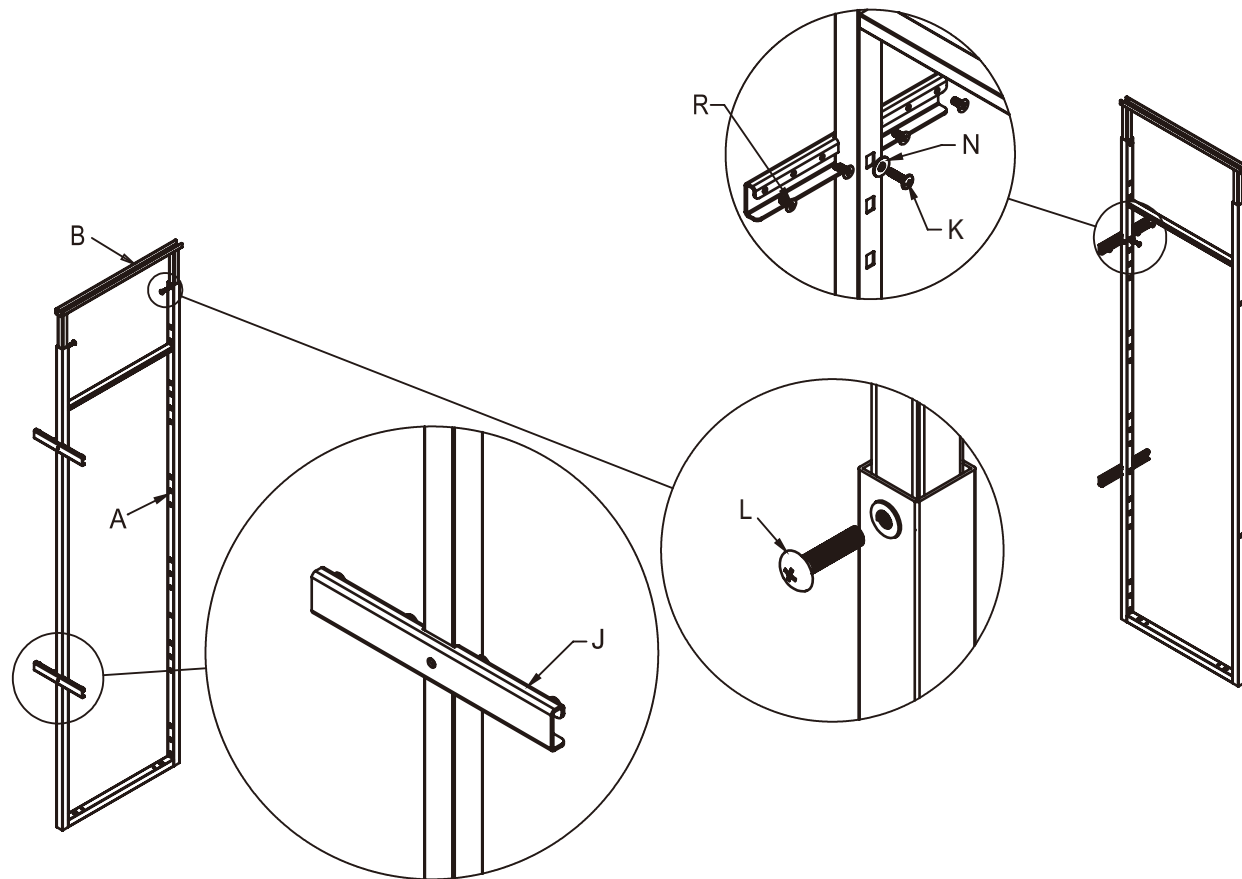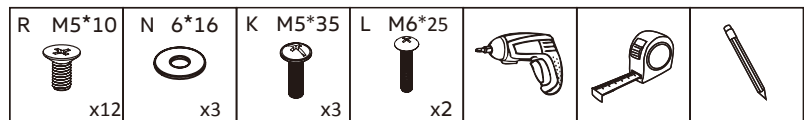


4

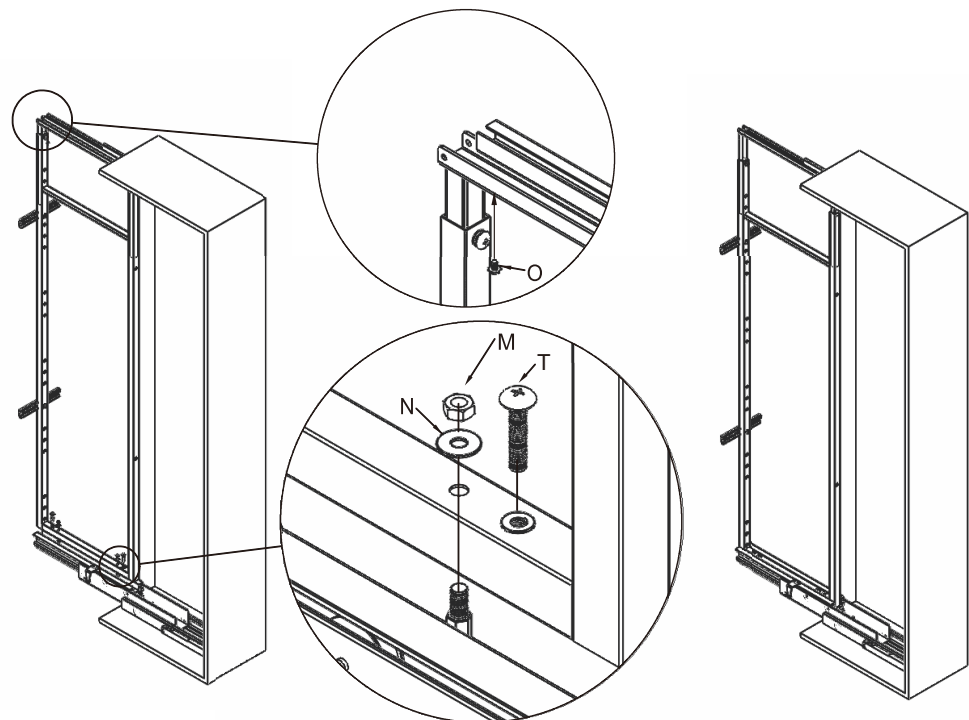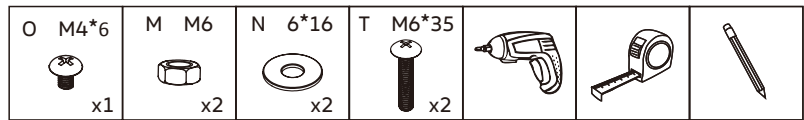

5

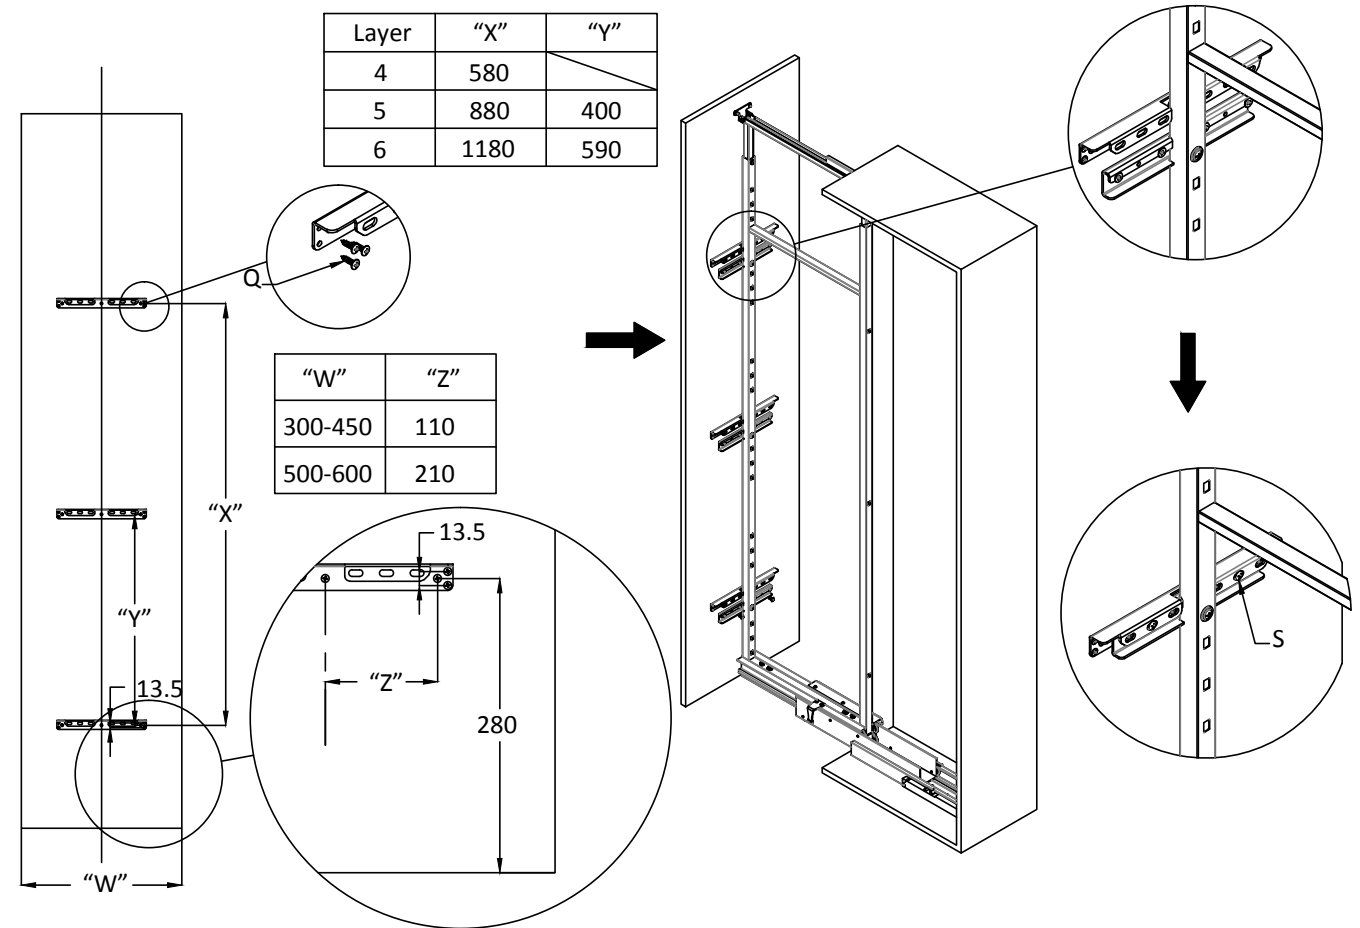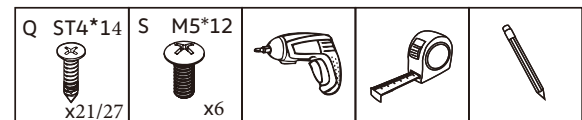

6

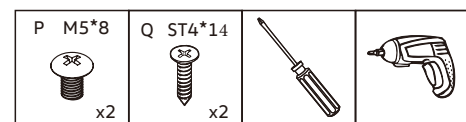


① Loosen the part K
Adjust the upper and lower direction of the door plate

② Lock the part F after adjustment

② Loosen the part S at the same time
Adjust the left and right direction of the door plate


③ Loosen the part S
Adjust the part R to loose
Adjust the left and right perpendicularity of the door panel

④ Loosen the part M
Lock the part L
Adjust the front and rear perpendicularity of the door panel

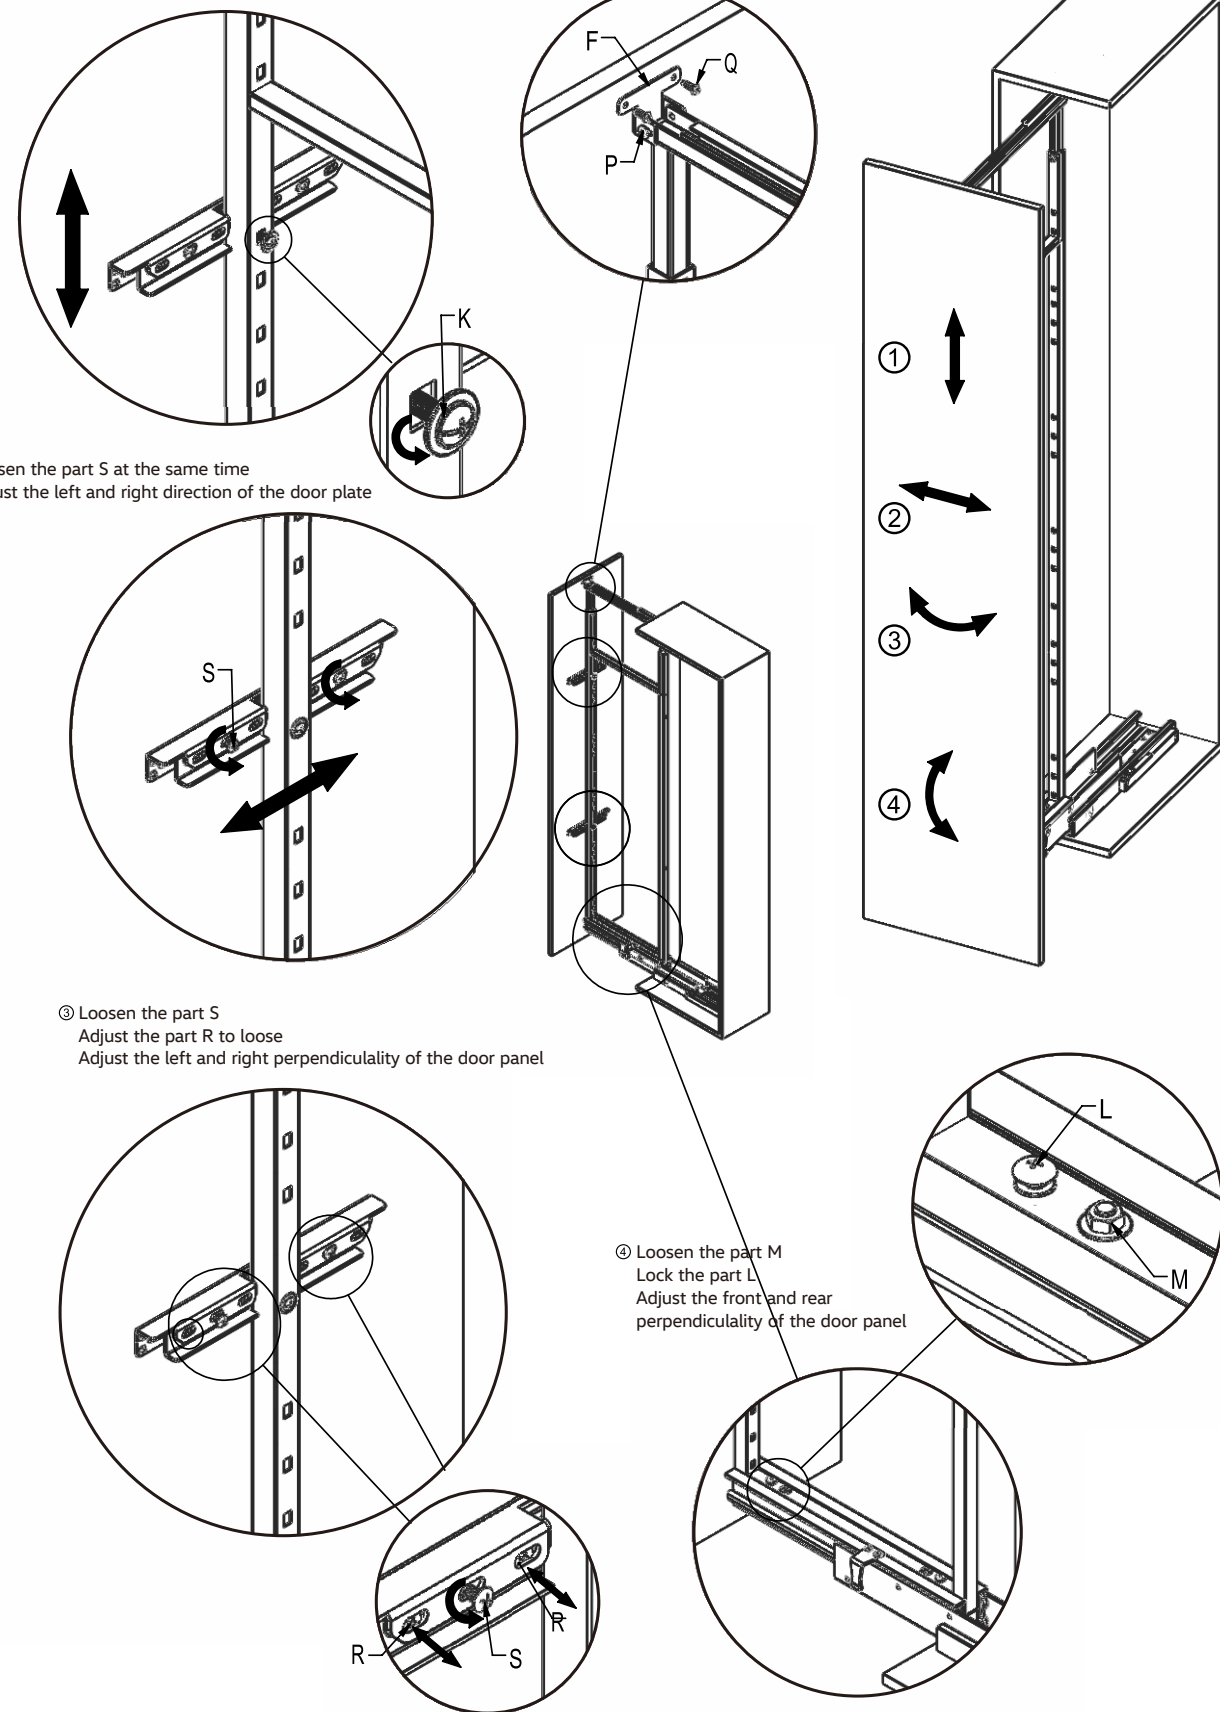


7

Part I fitting:

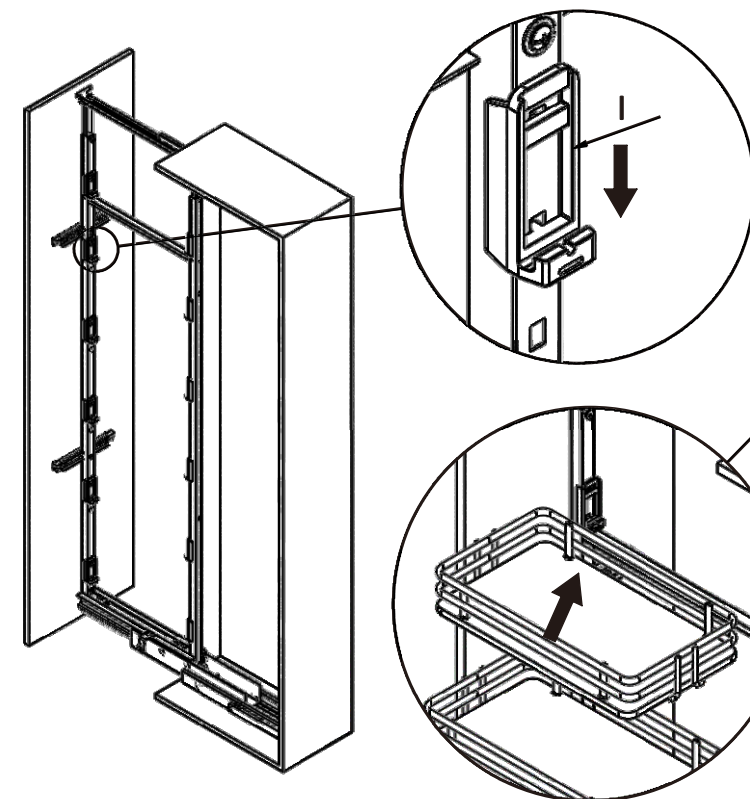


8

Baskets fitting ①

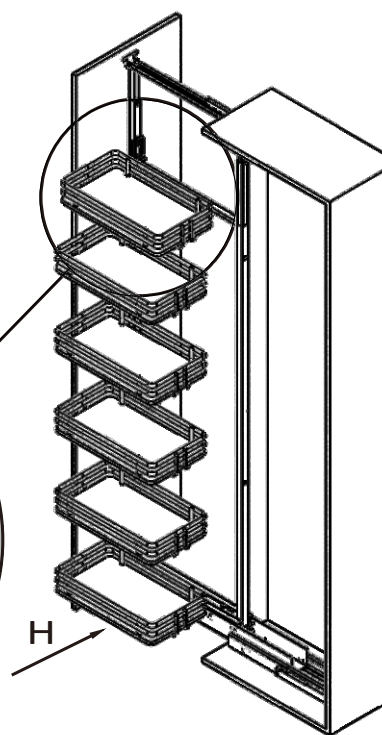

9

Baskets fitting②

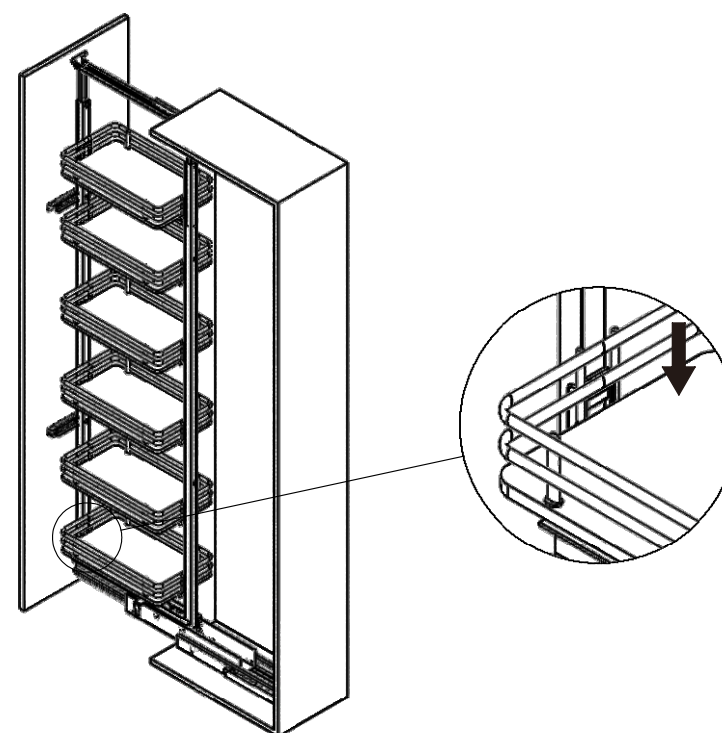

10

Complete installation:

